 
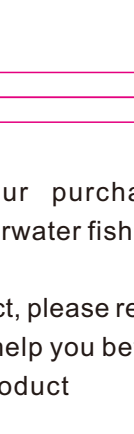 
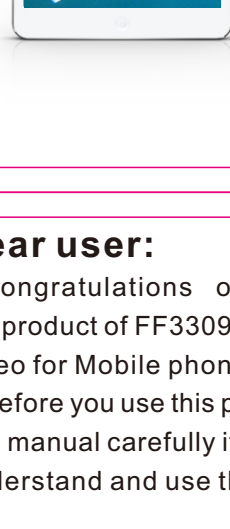 


Manual for Mobile phone fishing video



Dear user:

 
1. Congratulations on your purchase the product of FF3309 underwater fishing video for Mobile phone!
2. Before you use this product, please read this manual carefully it will help you better understand and use this product

Product Overview


1. LUCKY - FF3309 is designed and developed specifically for the fishing enthusiasts, use of this product can be found and visited the location and movements of fish under water, the product is connected through WIFI and Mobile phone and other smart devices, which it can be viewed via mobile phone, intuitively monitoring fish species, size, number and location of fish stocks fish swarm under water; It can also be used to identify the bottom of the state structure. And it may also be connected to the probe

with fishing rod to view the video recording fish swarm bite, increasing the fun of sport fishing.

2. The product also has a mobile power bank function; it can be charged for your phone and other smart devices with this product to make emergency power bank supply.

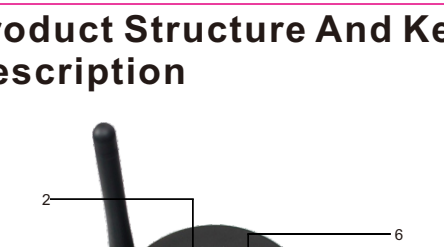

Product Structure And Key Description

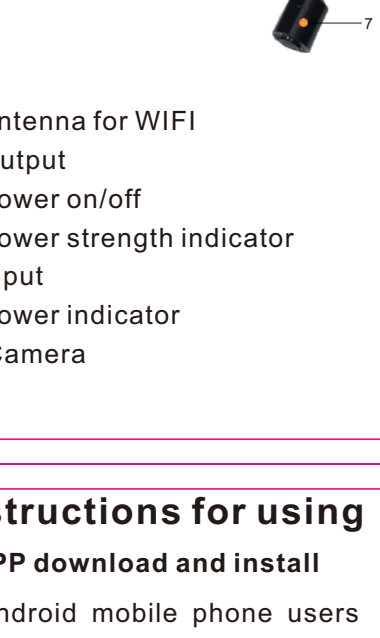 

- 1. Antenna for WIFI
- 2. Output
- 3. Power on/off
- 4. Power strength indicator
- 5. Input
- 6. Power indicator
- 7. Camera

Instructions for using

1. APP download and install

- 1) Android mobile phone users log in Android google Market, searching luckylaker software name to download.
- 2) Apple's mobile phone users can search luckylaker to download in the App Store.

2. FF3309 connected to mobile phone

 
- 1) Android mobile: Select WIFI of "luckylaker" in WIFI list ---- Enter the password 12345678 ---- Connect the FF3309 fishing digital video camera ---- Click the icon luckylaker to launch App.

- 2) Iphone mobile: Iphone settings ---- WLAN WIFI ---- Selecting WIFI called "WIFIIV" ---- Enter the password 12345678 ---- connecting FF3309 under water fishing video camera ---- Clicking the icon luckylaker ---- Starting App.

Use of APP Software

- 1) The software can setup WIFI and change WIFI name, WIFI password. After the changes are saved, you need to restart FF3309 video camera.
- 2) If you forgot your password after you modified the WIFI password, pressing Factory Default button to restore the factory settings, default password is 12345678.
- 3) After WIFI setup is complete, click START button in the middle of interface to start Use of the video camera.
- 4) Press once the button in the bottom of interface that are pause ---- takes pictures ---- recording ---- photo albums ----

screenshots five function buttons.
5) Photos after taking a picture and videos are automatically saved to the phone album; the user can click on the album button to enter the album interface, viewing photos or video.

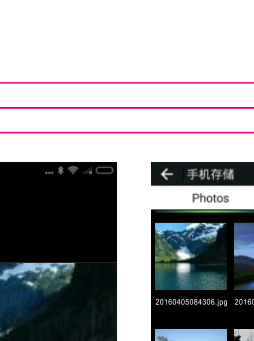



Maintenance

- 1) With stand temperature range of video camera from -20°C to 70°C.
- 2) Unavailable irritating chemical solvents for cleaning, it is recommended to wipe with a damp paper towel or soft cloth.
- 3) Please note that the protection of the environment and health, do not casually discarded the product, do not put the

product in a fire to avoid explosion.
4) Do not attempt to open the shell to repair, if the product fails, please contact the official customer service to carry out related consulting.

Product Specifications

  - 1) Distance of use of WIFI ---- 80m, It can reach a greater distance depending on the phone model;
- 2) Power ---- 3.7V, 5200mA rechargeable lithium battery (built-in);
- 3) Length of signal line ----- 20m;
- 4) Camera angle ----- 120° wide-angle;
- 5) Output voltage ----- DC-5.3V, 1A

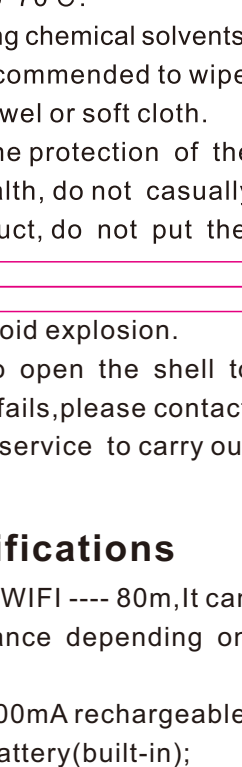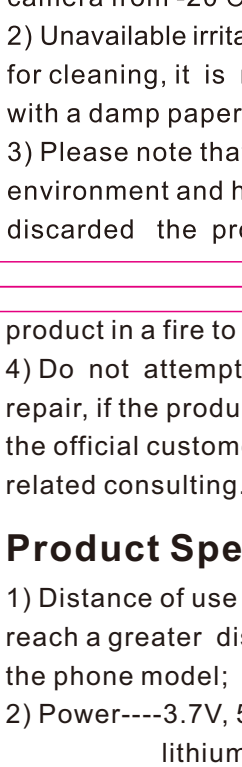

product in a fire to avoid explosion.
4) Do not attempt to open the shell to repair, if the product fails, please contact the official customer service to carry out related consulting.